

















 
 
 


# 788T Front Panel Button Shortcuts

Function	Key Sequence	Action
Record Tone	 + 	Setup Menu option File: Marker Mode must be set to Markers Disabled. While recording hold the REC button and press the tone button. Tone will be active as long as the tone button is held.
Jam Menu	 + 	Enters the time code jam menu.
Button Lock	 + 	Press backlight then tone to lock all front panel buttons except for Record, Stop and Play. FF and Rew are available in playback mode. Use backlight and tone again to unlock the panel.
Input Routing	 + 	Hold down STOP and press INPUT to cycle through input routing presets and custom routings.
Connect FireWire/USB	 + 	Initiates FireWire/USB connection.

Function	Key Sequence	Action
<b>False Take</b>	 + 	Delete last take prompt.
<b>Increase Take</b>	 + 	Increments take number to be recorded for the next file.
<b>Take List</b>	 + 	Take list and circle take identifying screen.
<b>Toggle Drives</b>		Hold the HDD button for 1 second to toggle viewable drives.
<b>LED Level</b>	 + Rotary Switch	Adjusts levels of LED brightness.
<b>Flashlight Mode</b>	 +  + 	With the power off, hold down these buttons while powering the unit to enter Flashlight mode. This illuminates all LEDs. Press power again to exit.